

Spartan Sr. - Aluminum Convertible Truck Operating Instructions and Parts Manual

ATTENTION: TO INSURE SAFE AND EASY USE OF YOUR WESCO SPARTAN SR HAND TRUCK, READ THESE INSTRUCTIONS BEFORE USING.

Description

The Spartan Sr. Aluminum 2 in 1 Truck is specifically designed to smoothly transition from 2 to 4 wheeled positions. It features an 18" noseplate, non-marking swivel casters and a sturdy, lightweight aluminum frame.


This product is distributed by:

Wesco Industrial Products, LLC 1250 Welsh Road

North Wales, PA 19454

Tel: 215-699-7031 Fax: 215-699-3836

Contact the factory for parts information and ordering. Visit us on the web at www.wescomfg.com

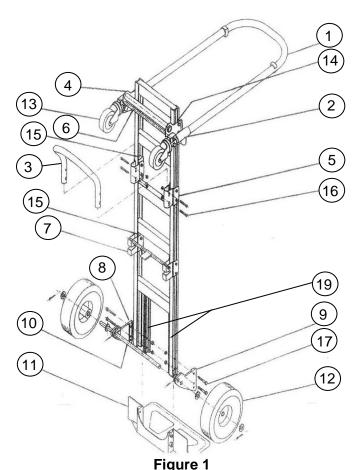

Unpacking

When unpacking the Wesco Product, check carefully for shipping damage and missing parts. If damage has occurred or any parts are missing, file a claim with the delivering carrier within 24 hours and notify the dealer from whom the unit was purchased.

Warranty Repairs

If the unit does not work properly, contact your dealer or the factory (215-699-7031) for units less than 90 days old.

Non-Warranty Service

If units are older than 90 days, repairs can be made easily on site with factory supplied parts.

NOTE: Do not send units to the factory for service without first obtaining a "Return Merchandise Authorization" (RMA) number from the customer service department. We will not be responsible for merchandise returned without proper authorization.

Parts List

(Item Number in Parts List identified in Figure 1)

	(Reminder in Farts Eist Identified in Figure 1)		
Item	P/ N	Description	Qty.
1	151577	Handle: Spartan SR	1
2	151571	Bracket: Handle Swivel	2
3	151569	Handle: Continuous	1
4	151572	Handle: Upper Ass'y w/ Bracket	1
5	151570	Bracket Mounting: Cont. Handle	2
6	151584	Assembly: Spreader Bar	1
7	151568	Release Mechanism	1
8	151509	Box: Axle LH	1
9	151508	Box: Axle RH	1
10	151564	Axle	1
11	151527	Noseplate	1
12	151551	Wheel: "PE" Pneumatic	2
		For 220001 Only	
	108479	Wheel: "SR" Solid Rubber	2
		For 219999 Only	
	053446	Wheel: "CF" Flat Free	2
		For 220145 Only	
13	151561	Caster	2
14	151573	Spacer	2
15	151574	Block	6
16	151563	Kit: Hardware For Handle/Axle	1
17	220311	Kit: Hardware For Caster	2
*18	100051	Washer: Flat 5/8 SAE	4
		For 219999 Only	
19	055127	Channel Filler	2

*Item Not Shown

LIMITED WARRANTY

WESCO INDUSTRIAL PRODUCTS (WESCO) warrants to the purchaser of this product for a period of ninety (90) days from the date of purchase that this product shall be free of defects in material and/or workmanship, as follows:

1. WESCO will supply, at no charge, new or rebuilt replacements for any part that fails through a defect in material and/or workmanship during the warranty period. To obtain warranty service, you must deliver the product prepaid, to the WESCO factory.

2. This warranty does not cover any product or product part which has been subject to accident, misuse, abuse or negligence. WESCO shall only be liable under this warranty if the product is used the manner intended by the manufacturer as specified in the written instructions furnished with this product.

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE PURCHASER. ANY EXPRESS WARRANTY NOT PROVIDED IN THIS WARRANTY DOCUMENT, AND ANY REMEDY FOR BREACH OF CONTRACT THAT, BUT FOR THIS PROVISION, MIGHT ARISE BY IMPLICATION OR OPERATION OF LAW, IS HEREBY EXCLUDED AND DISCLAIMED. UNDER NO CIRCUMSTANCES SHALL WESCO BE LIABLE TO PURCHASER OR ANY OTHER PERSON FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES, WHETHER ARISING OUT OF BREACH OF WARRANTY, EXPRESS OR IMPLIED, A BREACH OF CONTRACT OR OTHERWISE. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR ANY PARTICULAR PURPOSE ARE EXPRESSLY LIMITED IN DURATION TO THE DURATION OF THIS LIMITED WARRANTY.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or allow limitations on how long any implied warranty lasts, so the above limitations may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.



Spartan Sr. - Aluminum Convertible Truck Operating Instructions and Parts Manual

ATTENTION: TO INSURE SAFE AND EASY USE OF YOUR WESCO SPARTAN SR HAND TRUCK, READ THESE INSTRUCTIONS BEFORE USING.

Assembly Instructions

Assemble truck with top handle facing you.

- (1) Assemble the noseplate, right axle support, left axle support, and inside reinforcements to frame with 5/16" bolts as shown. Be sure to insert reinforcements between noseplate and frame before inserting bolts. Assemble nylock nuts onto 5/16" bolts and tighten.
- (2) Assemble axle, wheels and handle.
 - A. Insert axle through axle supports, using the higher of two hole positions.
 - B. On inside axle holes insert spring pins through axle so the pins rest in the slots of axle support to prevent rotation.
 - C. Slide one washer on each end of axle, then wheels and then another washer.
 - D. Insert cotter pin through hole at each end of axle and bend one leg.
 - E. Remove bolts from loop handle brackets, slide handle in brackets, replace bolts and tighten.
- (3) Check air pressure in tires, maintain 30 PSI.

